

Step and Repeat Banners

01



Unpack all contents from the carry bag.

02



Insert one of the unlabelled, thicker poles into the base and rotate it slightly until it clicks into place. Repeat this step with the remaining pole and base.

03



Select the two bottom horizontal poles and one of the middle connector poles.

04



Loosen the locking mechanism by twisting it and extend the pole slightly to create enough space for the locking pins in the next step.

05



Press and hold the locking pin, then gently slide the first horizontal pole onto the connector pole. Once the locking pin has passed beneath the lip of the horizontal pole, push the poles firmly together until they click into place. Repeat this step with the remaining horizontal pole.

06



Repeat Steps 3, 4, 5 using the two top horizontal poles and the remaining connector pole.

Step and Repeat Banners

07



Unscrew the hand-threaded bolts from the ends of the assembled top and bottom horizontal poles.

08



Loosen the locking mechanism by twisting it on the vertical telescopic pole and extend the pole slightly to create enough space for the hand-threaded bolt to pass through in the next step.

09



Working on one side, attach the bottom horizontal pole first, followed by the top horizontal pole, to the vertical telescopic pole using the hand-threaded bolts.

Note: For best results, this step should be completed by two people.

10



Thread the top horizontal pole through the top fabric sleeve of the banner first, followed by the bottom horizontal pole through the bottom fabric sleeve. Then, attach the bottom and top horizontal poles to the vertical telescopic pole using the hand-threaded bolts, as described in Step 9.

11



Using the telescopic poles, increase the height of the banner until the fabric is tight and hangs evenly.

12



Easy as that! Assembly complete.